


SQONY® PVP 8000

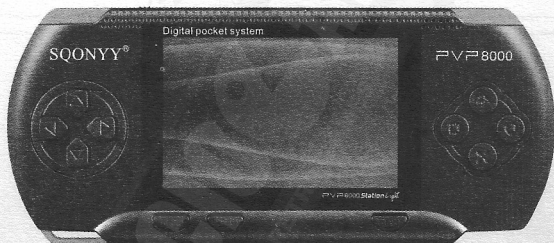



USER'S MANUAL

THANK YOU

Thanks for purchasing PVP Station light ,PVP Station light product designed for many hours of game -playing fun. This product is small and portable , so you can take it anywhere.

Please read the following contents prior to connecting and play to ensure proper use and care.

INSTALLATION

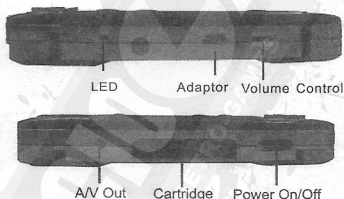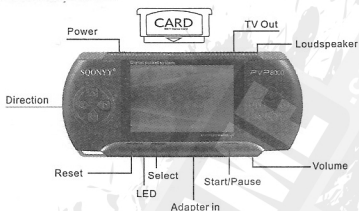

Accessories:




AV Cable



Lithium Batteries available

BATTERY INSTALLATION




1. Make sure the unit is turned OFF .
2. Remove cover on bottom of unit.
3. Remove exhausted batteries and dispose of them properly.
4. Replace battery cover.

Note: be sure the batteries in both the handset and console are fresh or the unit will not function properly!

BATTERY NOTICE

1. Do not short circuit battery contacts
 2. Do not dispose of batteries in fire
 3. Remove the batteries from the unit if it will not be used for an extended period of time.
- NOTE:** Manufacturer assumes no liability whatsoever caused by leaking or corroding batteries.

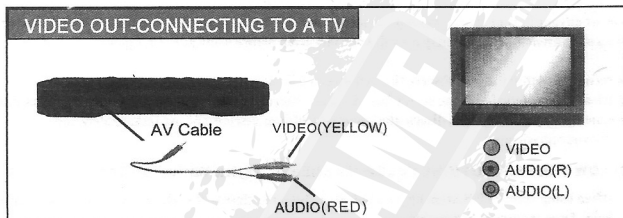

NOTE:

1. Before connect to a TV, make sure that your TV and the unit are turned off.
2. Switch the channel on TV to the audio/Video channel.

RESET FUNCTION

Whenever press the Reset button, it will return to the selection screen. If the game crashes, please press the Reset button to restart.

VOLUME CONTROL FUNCTION

turn the volume Control at the side of the unit to increase/decrease the volume

CARE AND MAINTENANCE

1. Do not disassemble or try to repair SQONY® Station light or any of its components
2. Do not store your SQONY® Station light in a humid place, on the floor or in any location where it may collect dirt, dust, and lint. Etc.
3. Do not drop, hit or otherwise abuse SQONY® Station light or its components
4. Make sure all connections to the SQONY® Station light are made carefully and inserted into the correct locations only.
5. Do not spill liquids on your SQONY® Station light or its components
6. To clean your SQONY® Station light with a soft slightly damp cloth. Always allow all the components to dry completely before using again.
7. To avoid the screen from heavy pressing or being touched by hard articles. Always clean the screen with soft and dry cloth, such as the one for spectacles
8. Keep the kids away from cable or connecting wire, or it may circle around their neck and cause the accident once the kids over exert the wires and make the unit drop down to floor.

WARNINGS AND PRECAUTIONS

A very small portion of population have a condition which may cause them to experience epileptic seizures or have momentary loss of consciousness when viewing certain kinds of flashing lights or patterns that are commonly present in our daily environment. These people may experience seizures while watching some kinds of television pictures or playing certain video games. Players who have not had any previous seizures may nonetheless have an undetected epileptic condition.

If you or anyone in your family has experienced symptoms linked to an epileptic condition (e.g. a seizure or loss of awareness), immediately consult your physician before using any video games.

We recommend that parents observe their children while they play the games. If you or your child experiences any of the following symptoms: dizziness, altered vision, eye or muscle twitching, involuntary movements, loss of awareness, disorientation, or convulsions, discontinue use immediately and consult your physician.

FOLLOW THE PRECAUTIONS BELOW WHENEVER USING YOUR PVP STATION LIGHT

- When using your PVP Station light do not sit or stand too close to the television screen. Play as far back from the screen as possible.
- Do not play if you are tired or need sleep.
- Always play in a well-lit room.
- Be sure to take a 10 to 15 minute break at least hourly while playing.

TROUBLESHOOTING

PROBLEM	SOLUTION
No picture on the LCD or TV screen	• Have batteries been installed correctly? • Is the SQONY® Station light turned on? • Is the TV turned on? • Is the TV set to AV input? • Are the SQONY® Station light and TV connected properly? Check whether the battery capacity is too low.
No game sound	• Have any of the cables become loose or disconnected? • Is the TV volume too low, or off? • Check whether the battery capacity is too low.
Picture is blinking or distorted	• Power off the SQONY® Station light and try again.
NO power	• Have batteries been installed correctly? • Check whether the battery capacity is too low.

Information contained herein is subject to change without prior notice.